

# Secure Clamp

## Unlocked position:

The device is on the unlocked position when the black collar clamp is closest to the ‘two pronged’ end of the main body.

## To lock:



Slide the black collar fully upwards towards the open end of the main body.

## Fitting the device to a club grip (or similar):

Place the open end of the body directly over the club grip end and push the assembly down as far as it will go until secure. Now slide the black collar downward as described to lock the device onto the grip. Photos 1,2 and 3

## To remove the device:


Unlock the collar and gently pull the device off of the club grip and when stowing to the “supplied baton” remember to “Lock” the device to help keep it secure.

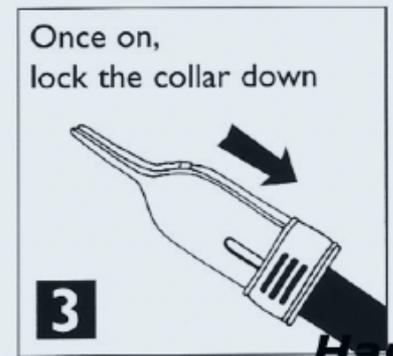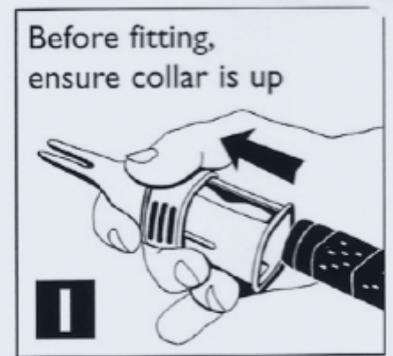

## With Cup On

With the cup on over the pitch mark prongs, you are free to retrieve any stray balls during your round, be it from water, out of bounds, slippery ditches etc.

## To convert device to the Pitch-mark

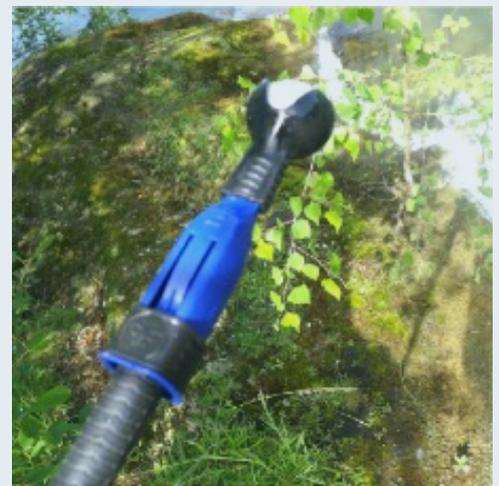

## Repairer:

Remove rubber cup by gently pulling away from the pitch mark prongs.

The reverse will restore the device to the Ball Retriever mode. (Please ensure you push the cup back on fully for maximum security).

Using the highly effective pitch mark repairer is easy. Simply insert prongs below the pitch mark, and rock the device forward. Finish by tapping with putter to fully repair the grass.

## Moulded rubber stowing baton

Use the baton included with your raptor to firmly attach device to outside of golf bag, during and after your round. **Don't forget** to slide clamp top into 'locked' position to secure the Raptor in place.



See more: [raptor-retriever.com](http://raptor-retriever.com)

